

Top Tray

**A:** 3.5mm Wide Medial-  
Right (00-0903-34XX)  
2-5 Hole (3402-3405)

**B:** 3.5mm Wide Medial-  
Left (00-0903-33XX)  
2-5 Hole (3302-3305)

**C:** 3.5mm Anterolateral- Right  
(00-0903-22XX)  
2-4 Hole (2202-2204)

**D:** 3.5mm Anterolateral- Left  
(00-0903-21XX)  
2-4 Hole (2102-2104)

**E:** 3.5mm Narrow Medial-  
Right (00-0903-32XX)  
2-5 Hole (3202-3205)

**F:** 3.5mm Narrow Medial-  
Right (00-0903-31XX)  
2-5 Hole (3102-3105)



### 3.5mm Anterolateral

Right (00-0903-22XX)

2 Hole 00-0903-2202

3 Hole 00-0903-2203

4 Hole 00-0903-2204

Left (00-0903-21XX)

2 Hole 00-0903-2102

3 Hole 00-0903-2103

4 Hole 00-0903-2104

### 3.5mm Wide Medial

Right (00-0903-34XX)

2 Hole 00-0903-3402

3 Hole 00-0903-3403

4 Hole 00-0903-3404

5 Hole 00-0903-3405

Left (00-0903-33XX)

2 Hole 00-0903-3302

3 Hole 00-0903-3303

4 Hole 00-0903-3304

5 Hole 00-0903-3305

### 3.5mm Narrow Medial

Right (00-0903-32XX)

2 Hole 00-0903-3202

3 Hole 00-0903-3203

4 Hole 00-0903-3204

5 Hole 00-0903-3205


Left (00-0903-31XX)

2 Hole 00-0903-3102

3 Hole 00-0903-3103

4 Hole 00-0903-3104

5 Hole 00-0903-3105

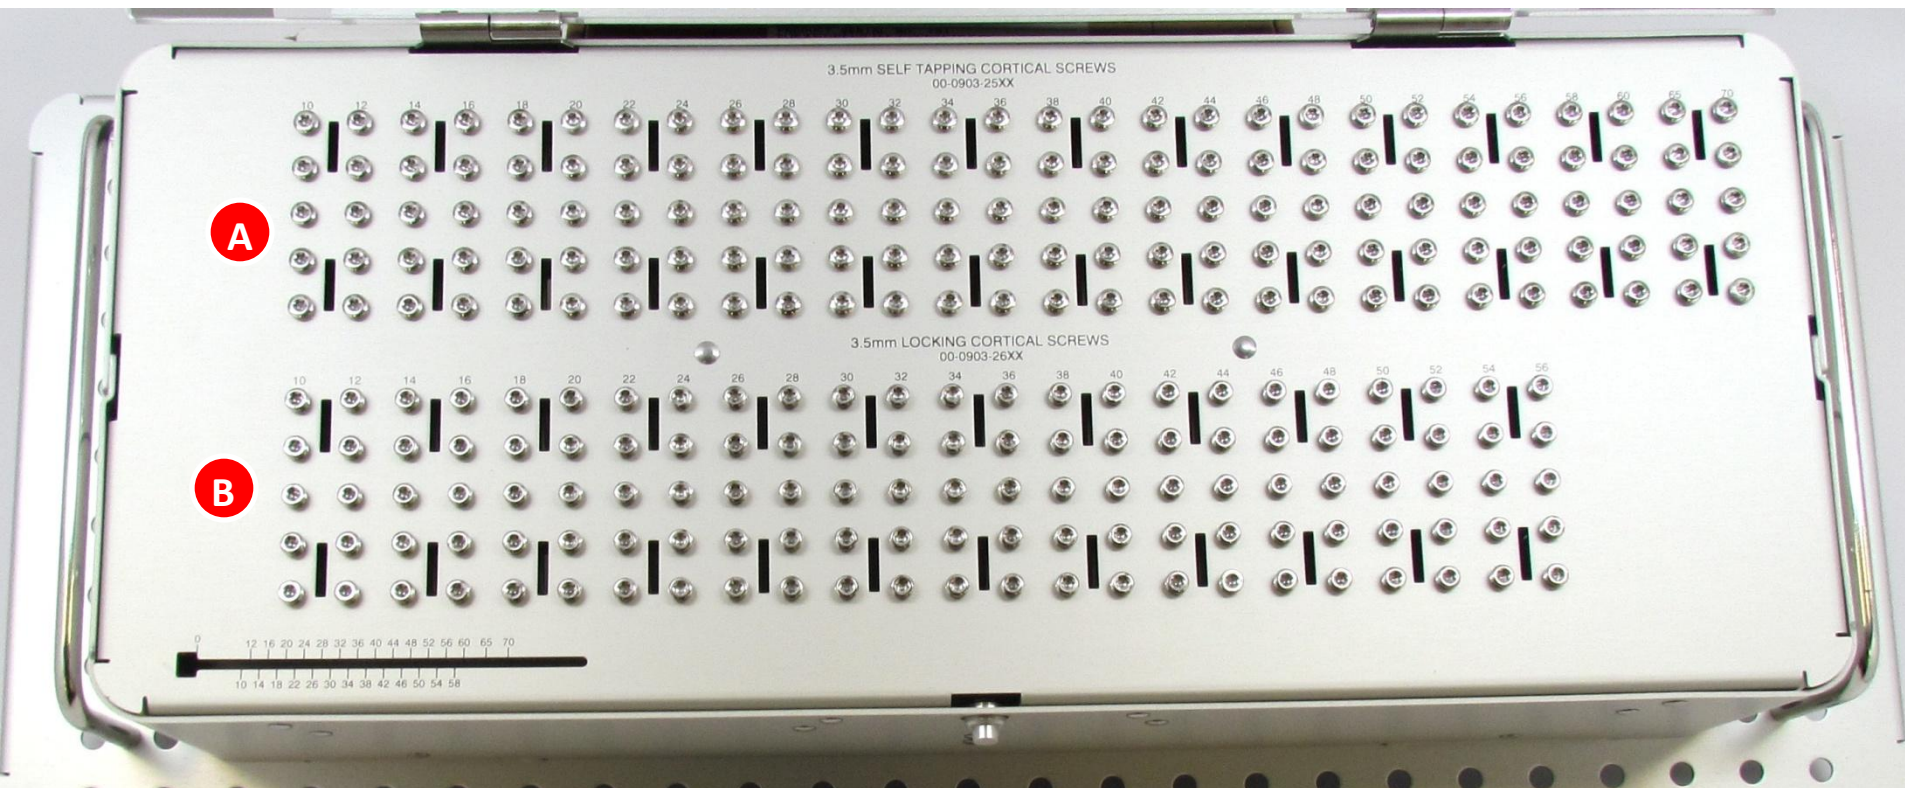


Second Tray

**A:** 3.5mm Self Tapping Cortical Screws (00-0903-25XX)  
 10mm-60mm in 2mm increments (2510-2560)  
 60mm-70mm in 5mm increments (2560-2570)

**B:** 3.5mm Locking Cortical Screws (00-0903-26XX)  
 10mm-56mm in 2mm increments (2610-2656)



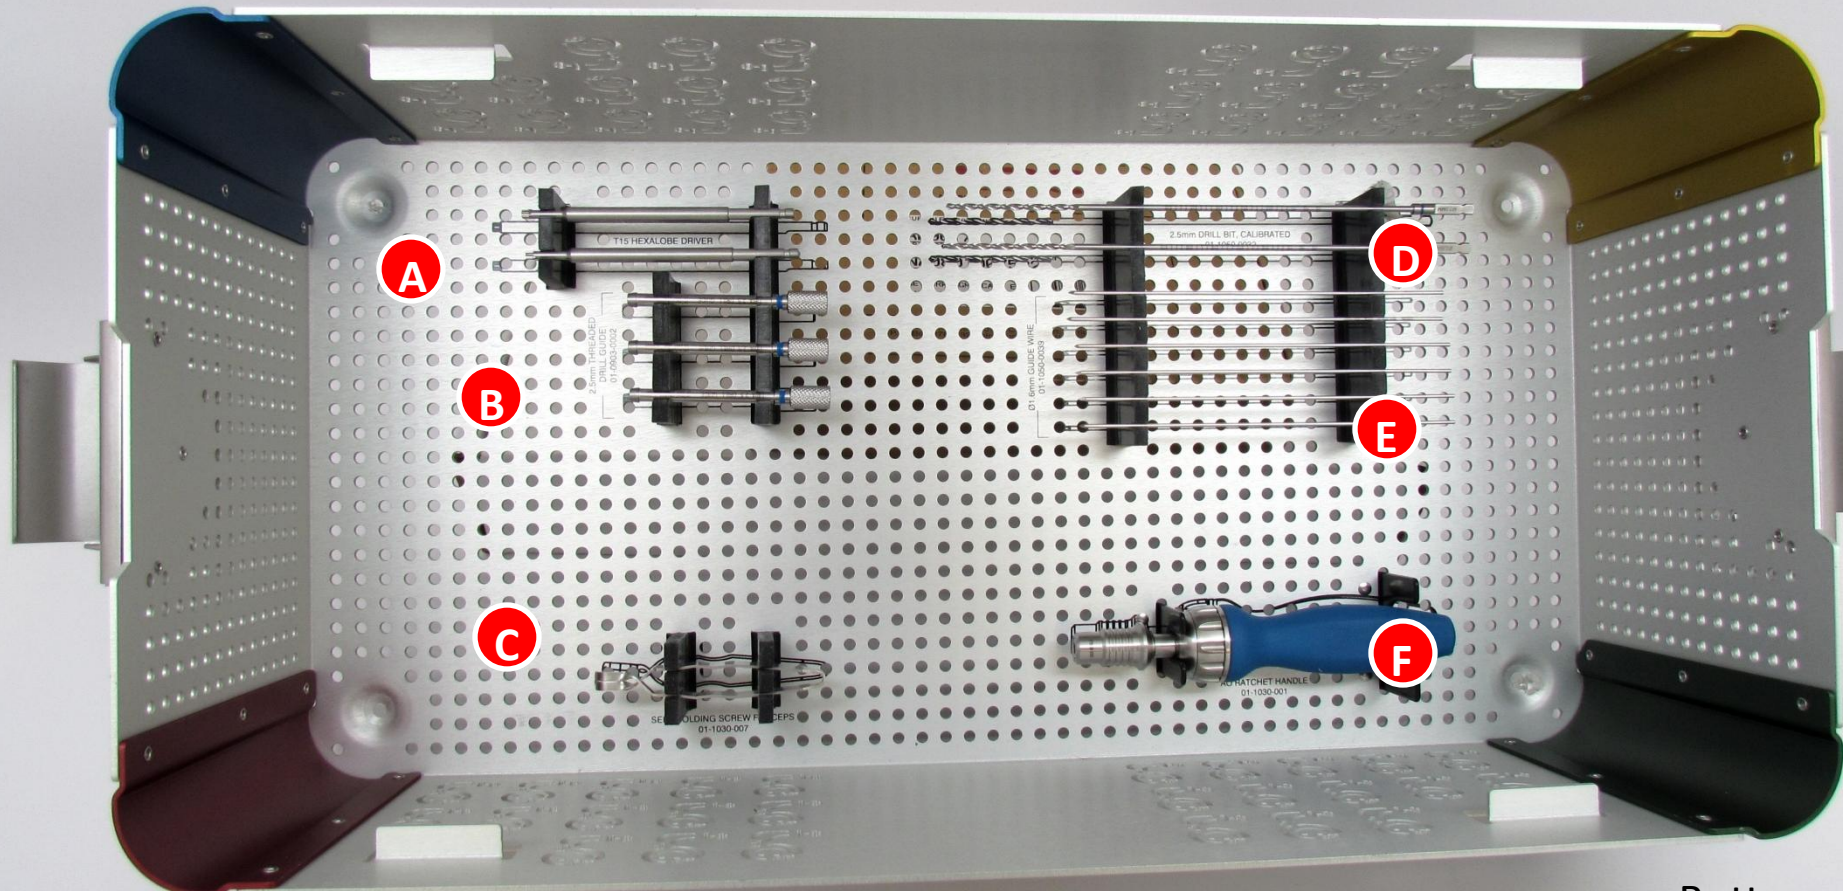

A: T15 Hexalobe Driver  
01-0903-0001

B: 2.5mm Threaded Drill Guide  
01-0903-0002

C: Self- Holding Screw Forceps  
01-1030-007

D: 2.5mm Drill Bit, Calibrated  
01-0903-0032

E: 1.6mm Guide Wire  
01-1050-0039

F: AO Ratchet Handle  
01-1030-001

Bottom  
Tray



1.6mm Guide Wire  
01-1030-0039



T15 Hexalobe Driver  
01-0903-0001



AO Ratchet  
Handle  
01-1030-001

## PediLoc Tibia Case and Instrument Guide



Self Holding Screw  
Forceps  
01-1030-007



2.5mm Threaded  
Drill Guide  
01-0903-0002



2.5mm Drill  
Bit, Calibrated  
01-1050-0032